



ATDRx to AT-xM-2A

terminal to terminal change out guide

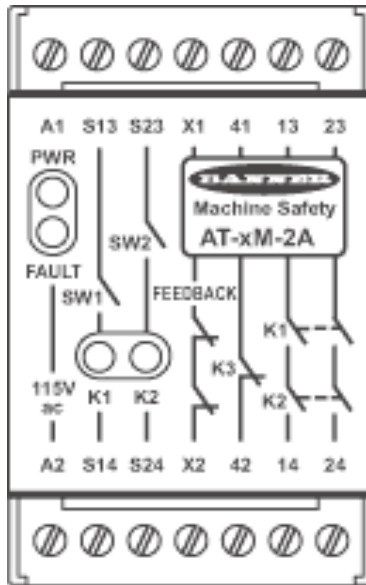

<u>ATDRx Terminal #</u>		<u>AT-xM-2A Terminal #</u>	<u>Function</u>
2	→	A1	Power
1	→	A2	
10	→	X1	Feedback
9	→	X2	
13	→	S13	SW1
12	→	S14	
15	→	S23	SW2
14	→	S24	
4	→	13	Output1
5	→	14	
6	→	23	Output2
7	→	24	
N/A	→	41	Aux
N/A	→	42	

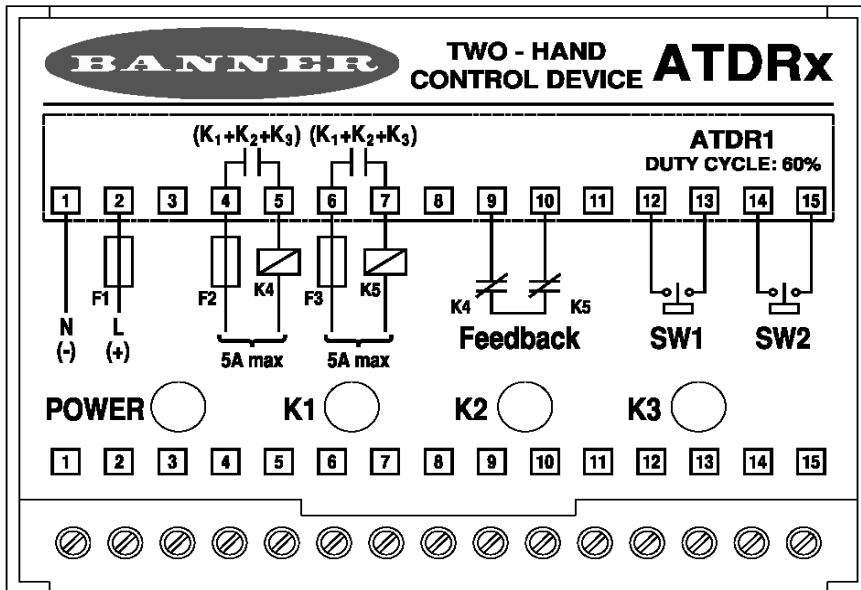



Banner Engineering Corporation
 9714 Tenth Avenue North
 Minneapolis, MN 55441
 Tel #: 763-544-3164
 FAX #: 763-544-3213 Sales Dept.
 FAX #: 763-544-3573 Applications Dept.

the machine safety specialist

Specifications for:
 ATDRx to AT-xM-2A Wiring Cross Reference

Date:	Lit P/N:	Rev:
10-Feb-04	116955	-