

## Accessories, Hubs, Lug Data



DH030NK



DS16CP



DS200EK1



DS200GK



DS22JK



DS36CL



DS56CK



DS30FP



DS12FK



DS426TK

**Table 28.0-9. Safety Switches—Accessories**

Description	Catalog Number
<b>Neutral Kits/Ground Kits</b> 30A DG 60–100A DG 200A DG, DH (NEMA 1, 3R enclosures) 30–60A DH 100A DH 200A DH (NEMA 4X, 12 enclosures) 400A DG, DH 600A DG, DH 400–600A Fusible DT, 800–1200A DH 30–100A DT 200A DT 400A Non-fusible DT 600A Non-fusible DT 800A DT 1200A DT	DG030NB DG100NB DG200NK DH030NK DH100NK DH200NK DS400NK DS600NK DS800NK DT100NK DT200NK DT400NK DT600NK DT800NK DT1200NK
<b>Ground Lug Kits</b> 30–100A DG 30–100A DH, DT ① 200A DG, DH, DT 400–600A DG, 400–1200A DH, 400–1200A DT	DG030GB DS100GK DS200GK DS468GK
<b>Switching Neutral Bonding Kits</b> 30–100A DT, three-pole, four-pole 200A DT, three-pole, four-pole 400A DT, three-pole, four-pole 600A DT, three-pole, four-pole 800A DT, three-pole, four-pole	DT100BK DT200BK DT400BK DT600BK DT800BK
<b>Control Pole Kit</b> 400–600A DG, 30–1200A DH, 30–800A DT	DS16CP
<b>Auxiliary Contact Kits</b> All switches (except 30–100A DG) 1NO/1NC All switches (except 30–100A DG) 2NO/2NC	DS200EK1 DS200EK2
<b>Copper Lug Kits</b> 30A DH, DT ② 60A DH, DT ② 100A DH, DT ② 200A DH ② 400A DH (NEMA 4, 4X, 12 enclosures) ③ 600–800A DH (NEMA 4, 4X, 12 enclosures) ③	DS16CL DS26CL DS36CL DS46CL DS56CL DS66CL
<b>Crimp Lug Pad Kit (NEMA 4, 4X, 12 Enclosures)</b> 400–600A DH ② 800A DH ③ 400–800A neutral DH ④	DS56CK DS76CK DS800CNK

① Ground bar kit is not listed on device publications.

② Order one kit for three poles.

③ Order one kit for each pole.

④ Order one kit per switch.

**Note:** Accessories are not applicable to NEMA 7/9 switches.

Description	Catalog Number
<b>Fuse Puller Kits</b> 30–60A DH ② 30–60A DH ⑤ 100A DH ② 200A DH ②	DS30FP DS60FP DS100FP DS200FP
<b>“J” Fuse Adapter Kits</b> 60A 240V DH ② 60A DT and receptacle switches ② 400A 600V DT ⑥ 600A 240–600V DH only ③	DS22JK DS26JK DT400JK DS600JK
<b>“R” Fuse Adapter Kits ②</b> 30A DG 100A DG 30A 240V DH, DT 30A 600V DH, DT, 60A 240V DH, DT, 60A DG 60A 600V DH, DT 100A 240–600V DH, DT 200A 240–600V DH, DT, 200A DG 400A 240–600V DH, 240V DT, 400A DG 600A 240–600V DH, 600A DG	DG030RB DG100RB DS12FK DS16FK DS26FK DS36FK DS46FK DS56FK DS66FK
<b>“T” Fuse Adapter Kits</b> 200A 240V DH ② 200A 600V DH ② 400A 240V DG, DH ③ 400A 600V DH ③ 600A 240V DG, DH ③ 600A 600V DH ③ 800A 240V DH ③ 800A 600V DH ③ 800–1200A 600V DH DT	DS426TK DS466TK DS526TK DS566TK DS626TK DS666TK DS726TK DS766TK
Hookstick handle	DH800HSH
Lubricating grease for safety switch blades and contacts (Each kit contains three 30 cc tubes of lubricating grease.)	DSLUBEKIT
<b>Auxiliary Contacts for:</b> 16–25A three-, four-pole rotary switches, includes holder and contact (1NO/1NC) 30–40A three-pole rotary switches, includes holder and contact (1NO) 60–125A three-pole rotary switches, includes holder and contact (1NO) 30–40A four-pole rotary switches, includes holder and contact (1NO) 30–125A three-, four-pole, contact only (1NC) 30–125A three-, four-pole, contact only (1NO)	CMAC CRAC3 ⑦ CWAC3 ⑦ CRAC4 ⑦ CRAA ⑦ CRAB ⑦

⑤ Receptacle switches.

⑥ Order one kit for six poles.

⑦ The mechanism is reversed on these contacts.