


~~You can't~~ measure voltage without test leads

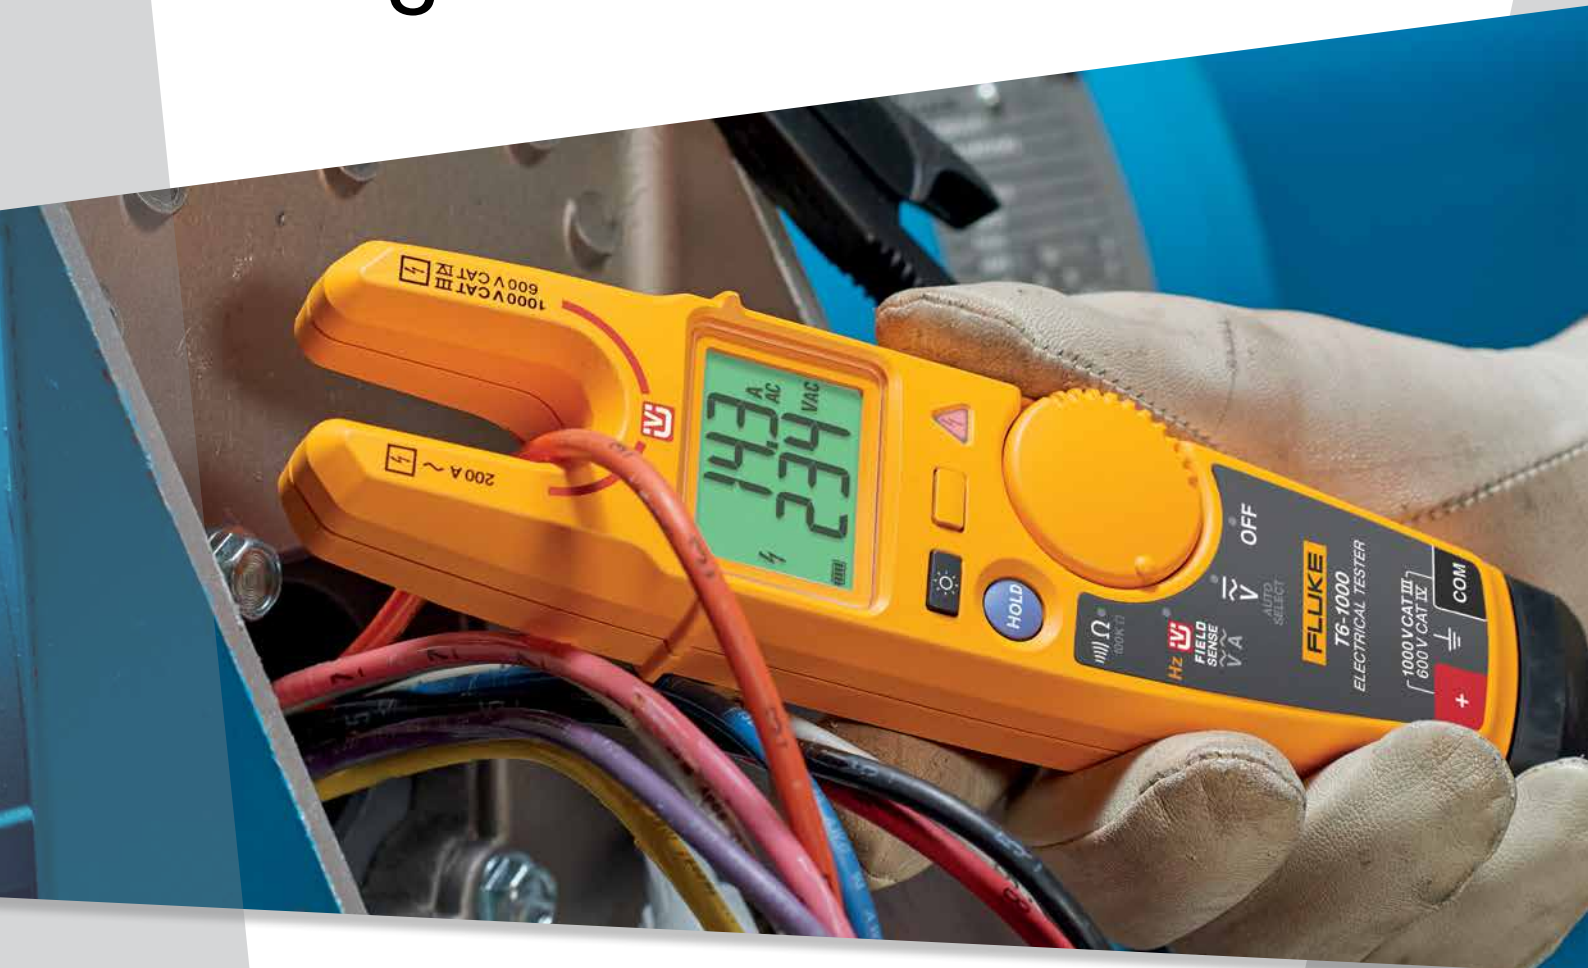

The NEW Fluke T6-1000 Electrical Tester

Now measure voltage the same way you measure current, without test lead contact to live voltage. FieldSense technology lets you slide the open fork over a conductor and see the voltage level.¹

BE SAFER Measure voltage to 1000 V ac through the open fork, without test leads.

BE FASTER No need to open covers or remove wire nuts.

BE MORE EFFICIENT Simultaneously measure voltage and current.

BE EVERYWHERE 17.8 mm open fork is widest in the industry; measure up to 200 A on 4/0 wires (120 mm²).

¹ Requires capacitive path to ground, provided through user in most applications. Ground connection via test lead may be required in some situations.



CBC
CARLTON-BATES COMPANY
A SUBSIDIARY OF WESCO DISTRIBUTION, INC.

FLUKE®